

BRIVA®

TASTE IT YOUR WAY

**500
WATT**

PLASTIC
1.5L
JAR

**BPA
FREE** ✓
MATERIALS

SMOOTHIE BLENDER B500- BH206



ART .NR. 50206 » SMOOTHIE BLENDER B500- BH206 «




GEBRAUCHSANLEITUNG LESEN UND
BEACHTEN! ANWEISUNGEN BEFOLGEN!

Model- und Zubehöränderungen vorbehalten!

ENGLISH

DEUTSCH

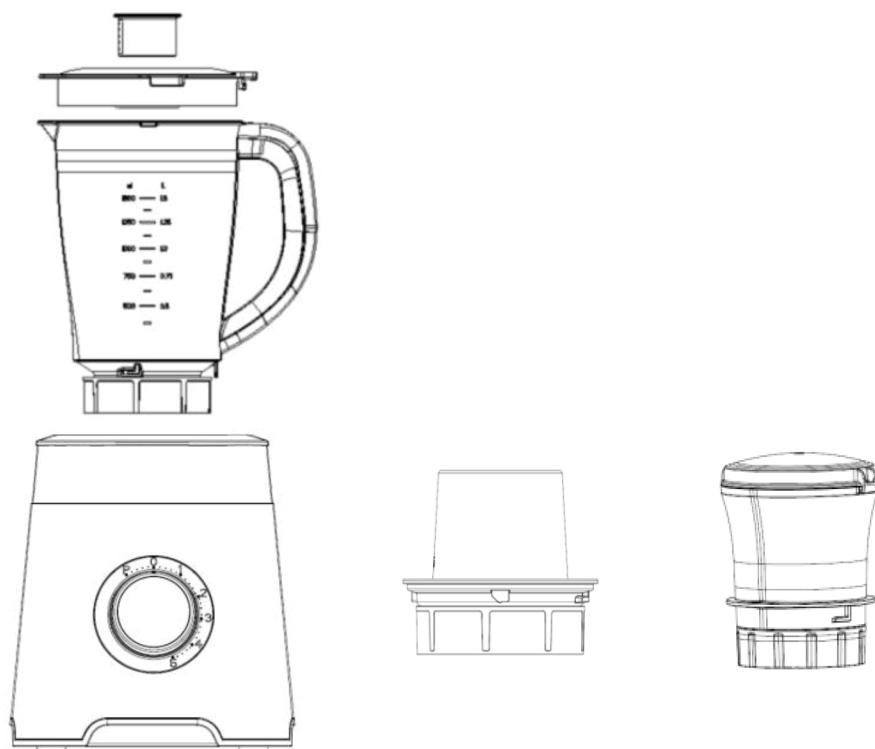

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table or counter.
4. Do not operate any appliance with a damaged cord or plug or after the appliance

malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.

5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

6. Close supervision is necessary when any appliance is used by or near children.

7. Avoid contacting the moving parts.

8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.

9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.

10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to "off", then remove plug from wall outlet by grasping the plug, not the cord.

11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.

12. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

13. Children should be supervised to ensure that they do not play with the appliance.

14. Do not leave the machine on unattended.

15. When removing the blender from the motor unit, wait until the blades have completely stopped.

16. Always operate blender with cover in place.

17. Always use the appliance on a secure, dry level surface.

18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.

19. Do not use outdoors.

20. Do not use appliance for other than its intended use.

21. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

22. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

23. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

24. With thermostat, overload protection function. Once the overload protection is enabled, unplug the device from the power supply and wait for about 30 minutes. After the thermostat is reset, the machine can work normally

HOUSEHOLD USE ONLY

KNOW YOUR BLEANDER


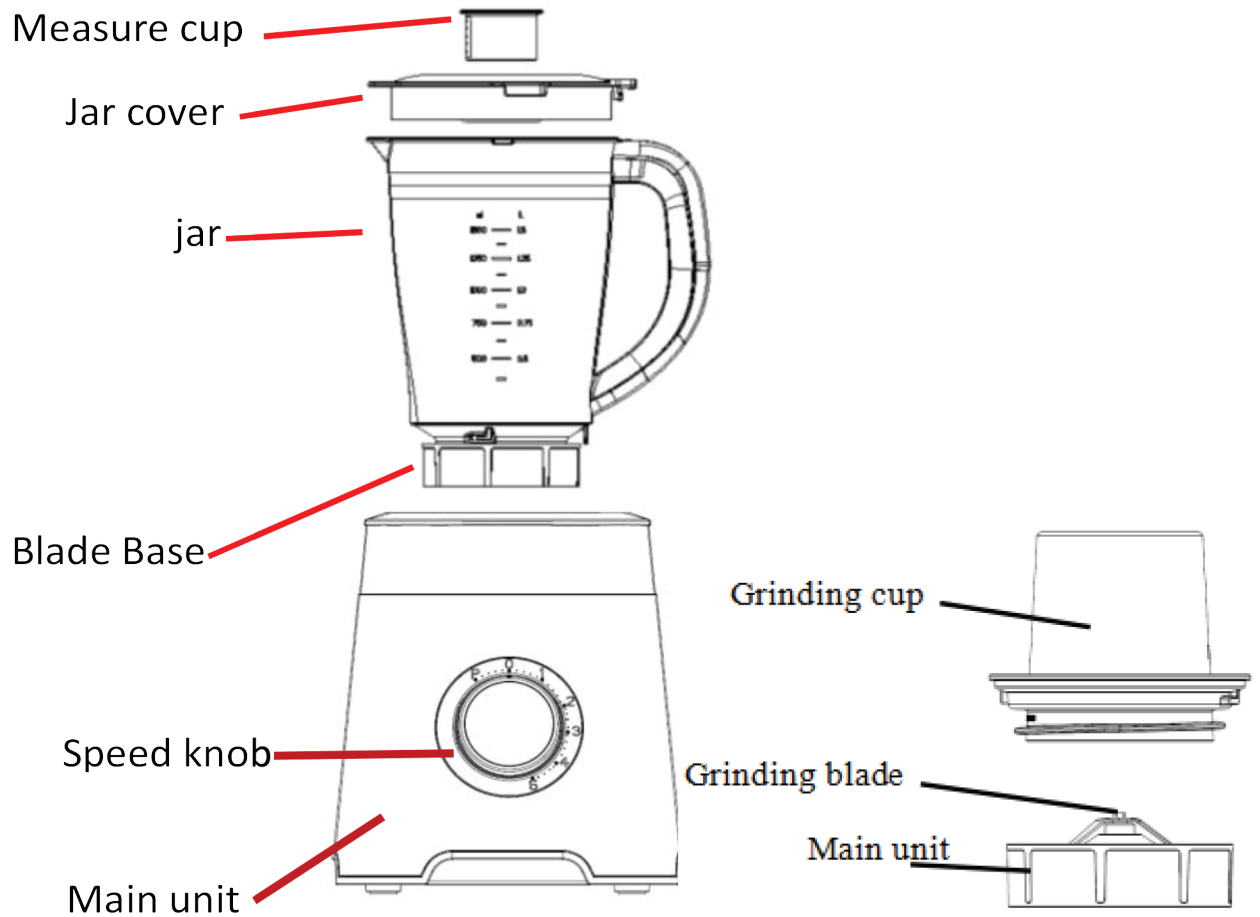


Fig.1

SPEED KNOB

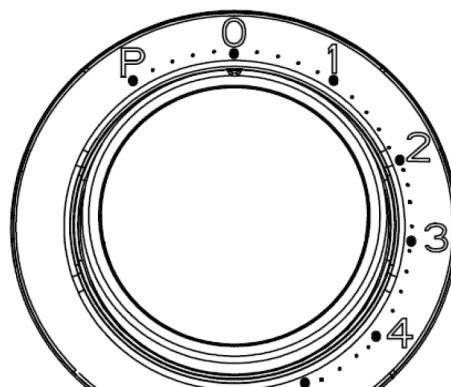

F
Fig.2

CHOPPER_BOWL

Fig.2

HOW TO USE

Before initial use

1. Before first use, unpack the appliance and place all parts on a horizontal surface.
2. The jar assembly (including the measure cup, lid, seal ring 1, jar unit, seal ring 2 , blade assembly) has already been assembled into the motor unit. Disassemble to wash all detachable parts except the motor unit. Refer to the latter chapter CARE AND CLEANING.
3. Once all pieces have been cleaned and dry thoroughly, reassemble.
 - 1) Invert the jar unit onto a level surface, holding the jar handle, put the the seal ring 2 and blade assembly onto the blade base bottom and secure the blade assembly by turning it clockwise until tight (See Fig.3)
 - 2) Reposition the jar assembly with its opening upwards. Wrap the seal ring 1 around the lid bottom and put the lid onto the jar assembly. Place the measure cup exactly into the lid by fitting the small projection on the both sides of the cup into the slots of the lid and turning the jar cover clockwise until tight. (See Fig.4)
 - 3) Finally, place the assembled jar onto the motor unit by aligning the strip on the assembled jar bottom. (See Fig.5)

CAUTION: Jar and jar base is now secure. Do not try to twist the jar and jar base onto motor unit

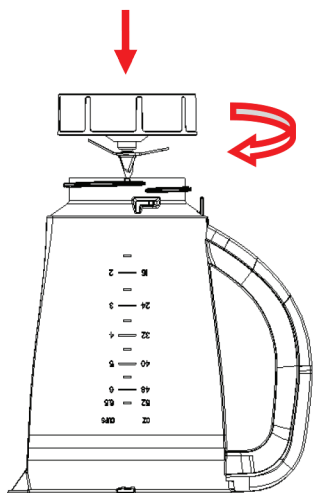


Fig.3

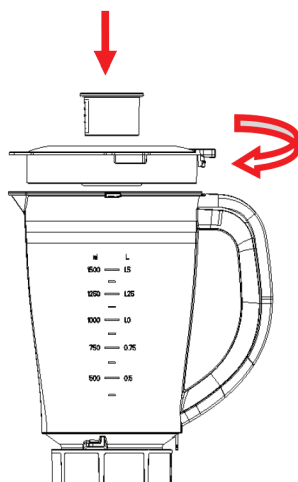


Fig.4

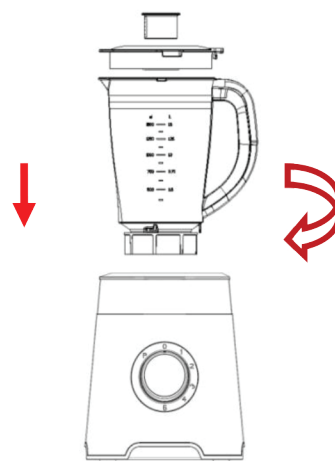


Fig.5

How to use

1. Peeled or cored the fruit or vegetables and then cut it into small dices.
2. Place the food to be blended into the jar (See Fig.6) . Usually, certain amount of purified water has to be added to facilitate the smooth running of appliance.The amount of mixture should not exceed the max level as indicated on the jar.

RECIPE

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrot (apple, pear etc.)	Cut into 15mm*15mm*15mm	Carrot:600g Water: 900g	High speed
Ice crush	25mm*25mm*25mm	100g	Ice crush clean

Note: never use boiling liquids or run the appliance empty.

- Put the lid on the jar. Be sure the measuring cup is in place.
- Plug the power cord into a standard wall outlet.
- Turn the speed knob to the appropriate speed setting for your task.
- For quick or delicate blending tasks, turn the speed knob to P position and hold for a few seconds and then release, the knob will reset to O position automatically. Operate several times until the consistence you want is obtained
- If you want to add ingredients while the blender is working, remove the measuring cup and place through the lid opening. (See Fig.7)
- When crushing ice or hard food, keep one hand firmly on the lid.
- When the consistence you desire is obtained, turn the knob to O position.

Note: 1) For each use, the consecutive operation time should be less than 2minutes. at least 10 minutes rest time must be maintained between two continuous cycles, let the unit cool to room temperature before performing next operation cycle.

2) If you want to stop the machine during operation, turn the knob to O position anytime.

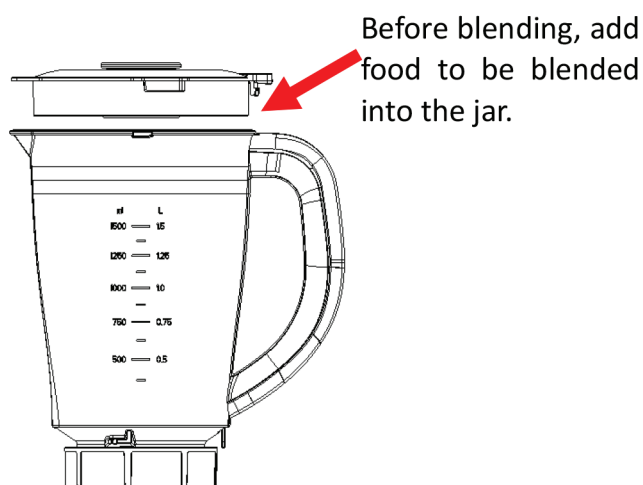


Fig.6

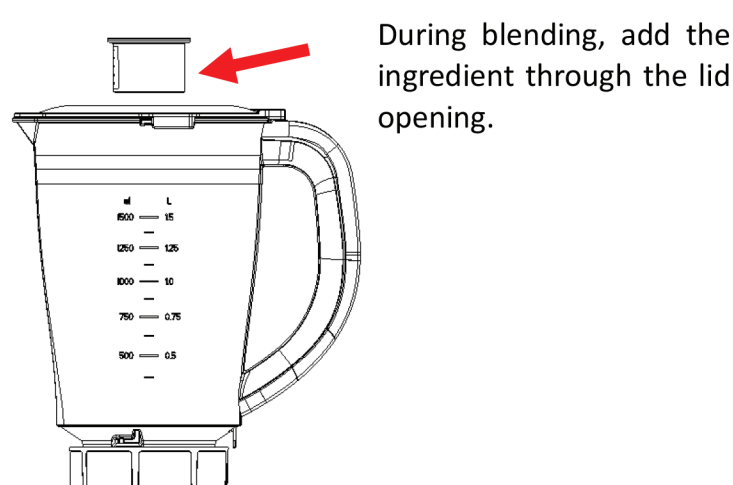


Fig.7

Important operating tips

- For best circulation of food that are to be blended with some liquid, pour the liquid into the jar first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 6 ice cubes. If more ice is needed, remove the cup and add cubes one by one through the lid opening.

4) Do not run the appliance for more than 3 minutes per time, and only wait until the unit

is cooled to room temperature before performing next operation cycles.

GRINDER OPERATION

1. Lay the motor unit on the flat horizontal surface and make sure it is unplugged.
2. Fill the grinding bowl with proper coffee bean, then assemble the grinding blade assembly and grinding bowl together. Please see Fig.8

NOTE: The quantity of coffee bean the grinding bowl allows to grind is Max 60g.


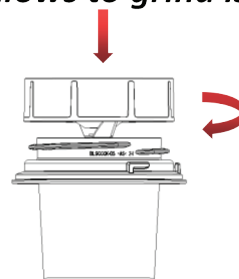


Fig.8

3. Place the grinder attachment on the motor unit, Turn the bowl clockwise until a click will be heard when locked into position properly.

NOTE: There is a safety interlock device at the bottom of bowl, if the bowl is not assembled in place, the chopper will not operate.

4. Ensure the **Speed Selector** to “0” Position, then plug into power outlet.
5. Select the desired speed setting, the appliance will start grinding. During grinding, you can press down the **Pulse button** without releasing it if want to accelerate the process of grinding.
6. Turn the **Speed Selector** to “0” Position once the coffee has been ground to your desired result.
7. Disconnect from power supply once finished. Disassemble the grinder attachment from the unit, keep the grinding bowl downward and turn it anticlockwise (see fig.9), then empty the bowl and serve.
8. Do not run the appliance for more than 30s per time, and only wait until the unit is cooled to room temperature before performing next operation cycle.

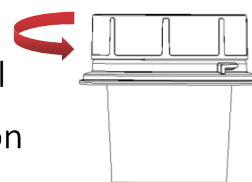

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, unplug the blender.
2. Always wash immediately after use for easier cleaning. Don't let food dry on the jar assembly as this will make cleaning difficult.
3. Pour a little warm soapy water into the jar and turn the knob to P position for a few seconds. And then empty the jar.
4. Dismantle all detachable parts. Lift the jar assembly off the motor unit, To detach the blade assembly by turning it clockwise from the jar base bottom , and remove the seal ring 2 and blade assembly (see fig.10). In addition, detach the jar cover seal ring 1 from the jar cover

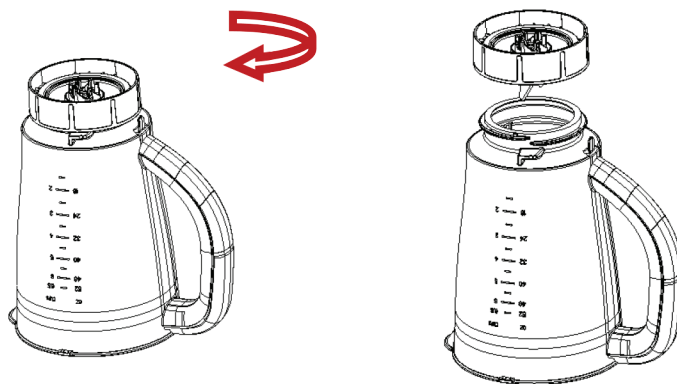


Fig.9

Fig.10

Fig.9

5. Rinse the measure cup, lid, seal ring 1, jar unit, seal ring 2 and blade assembly by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting

shall not exceed 65°C.

6. Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. **Don't immerse the blade assembly in water.** Leave to dry upside down away from children.
7. Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.

GRINDER OPERATION

1. Then place the prepared chopping food into the bowl. The food must be cut into small size firstly (such as 2cm*2cm*6cm for beef).

NOTE: The appliance allows you to chop the maximum quantity of beef or meat is 150g. Select the highest speed and operate for 40S.

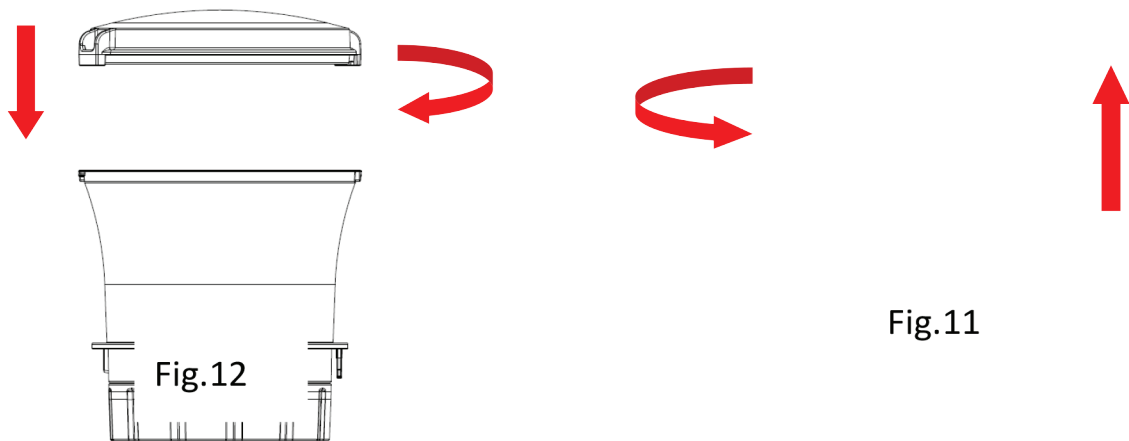


Fig.11

2. Fill the chopper bowl with proper beef, then assemble the bowl lid and chopper bowl together. Please see Fig.12

3. Place the chopper bowl on the motor unit, Turn the bowl clockwise until a click will be heard when locked into position properly.

NOTE: There is a safety interlock device at the bottom of bowl, if the bowl is not assembled in place, the chopper will not operate.

4. Ensure the **Speed Selector** to "0" Position, then plug into power outlet.

5. Select the desired speed setting, the appliance will start grinding. During chopping, you can press down the **Pulse button** without releasing it if want to accelerate the process of chopping.

6. Turn the **Speed Selector** to "0" Position once the beef has been ground to your desired result.

7. Disconnect from power supply once finished. Disassemble the chopper bowl from the unit, turn bowl lid anticlockwise (see fig.11), then empty the bowl and serve.

CAUTION

- 1) Do not immerse the motor unit in liquid to prevent the risk of electric shock.
- 2) Do not use rough scouring pads or cleansers on parts or finish.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.

BRIVA®

TASTE IT YOUR WAY

BRIVA HAUS GmbH

Beedstraße 54
40468 Düsseldorf
Deutschland

Telefon +49 211 385 39977

Info@briva-haus.de

briva-haus.de